



## JIUHE 38M Concrete pump truck operation steps (Sinotruk TX310 Chassis)

**First step:** Cab key turn on, the dashboard indicator light is on,  
Step clutch, key starts the truck, Press Power, check if air pressure  
reach more than 6Mpa, Press Pump, Gear turn to 8, Slow release  
clutch, then the cab switched to pumping status successfully.

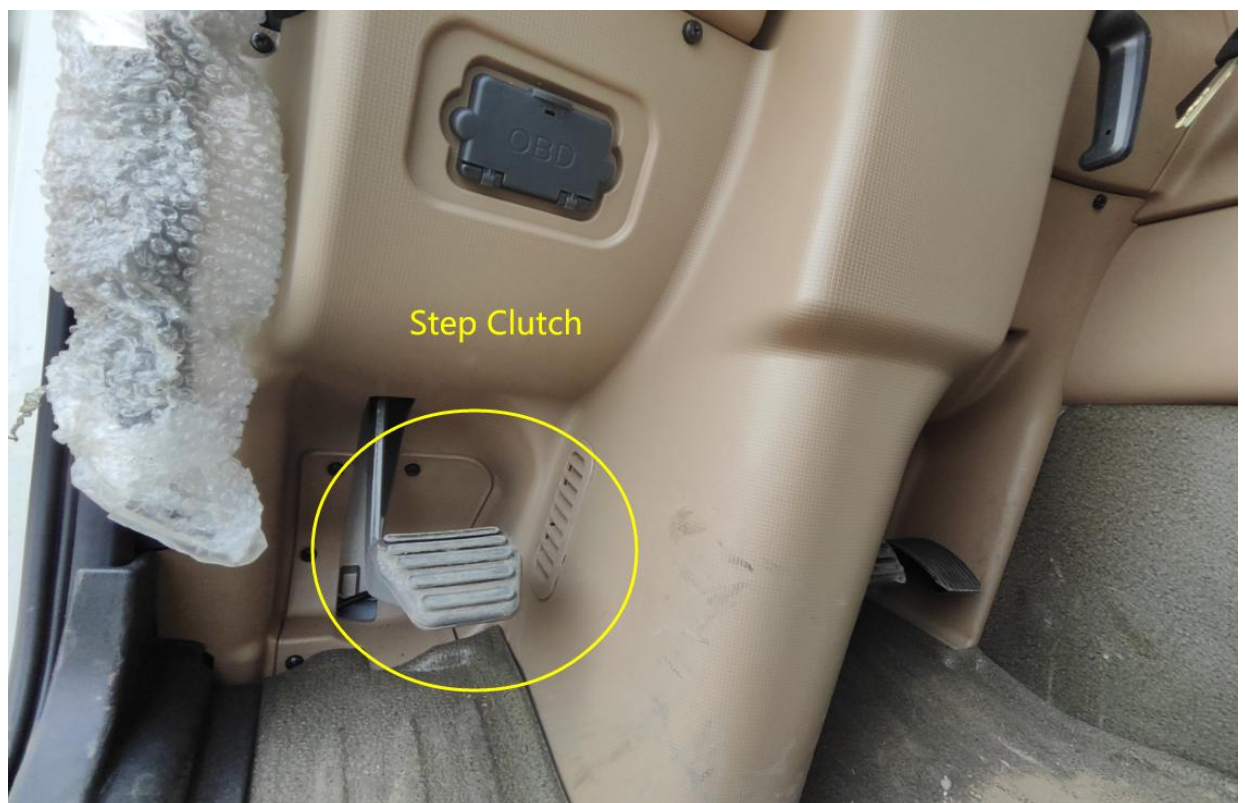

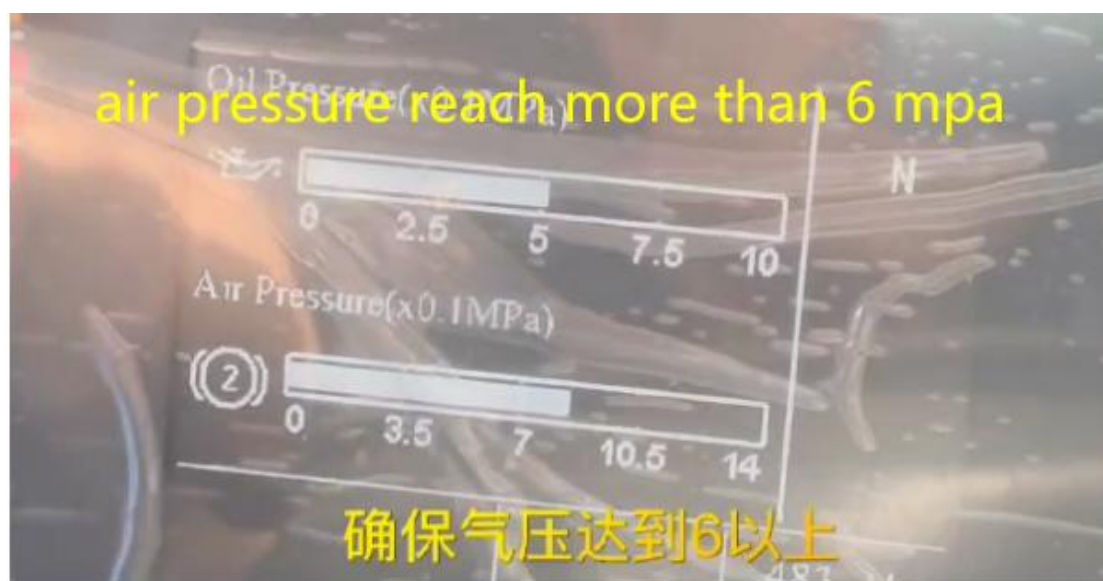





Gear turn to 8



slow release the clutch



## Second step:

operate leg: turn on the control panel power; then


switch to Near control; if have Mechanical limit lock, then open

first; open the rear leg switch; As per ground situation, put on the


support pad well; keep pressing “leg”, then can operate leg further.

(max. Allowable angle of inclination is 3 degree ), tyre off the

ground 30-50mm.

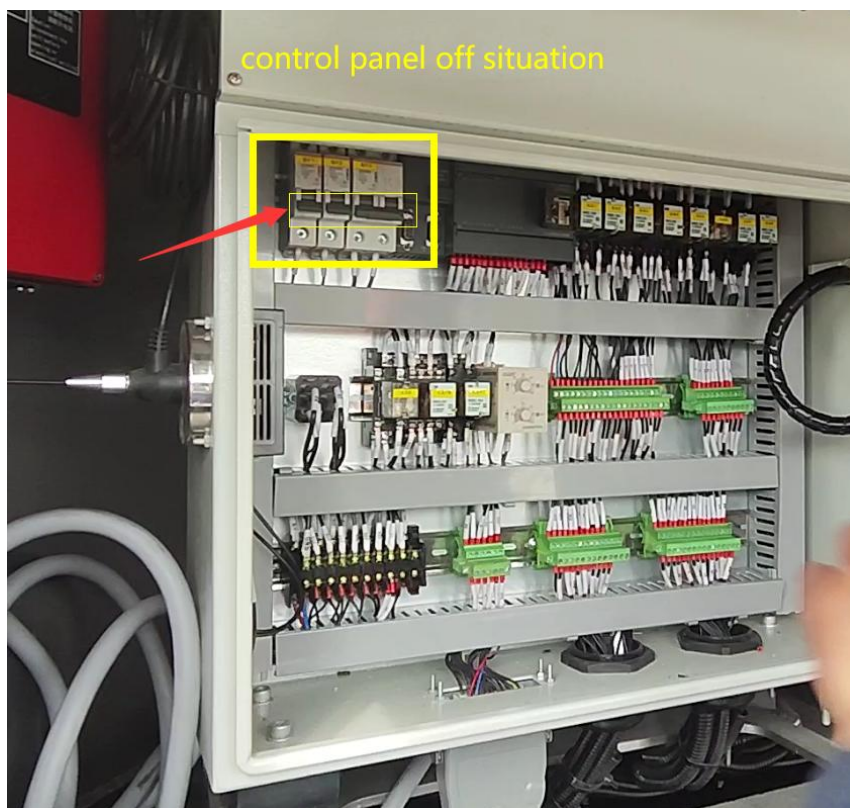



(Above photo shown Control panel off situation, the four black switches in below position.)

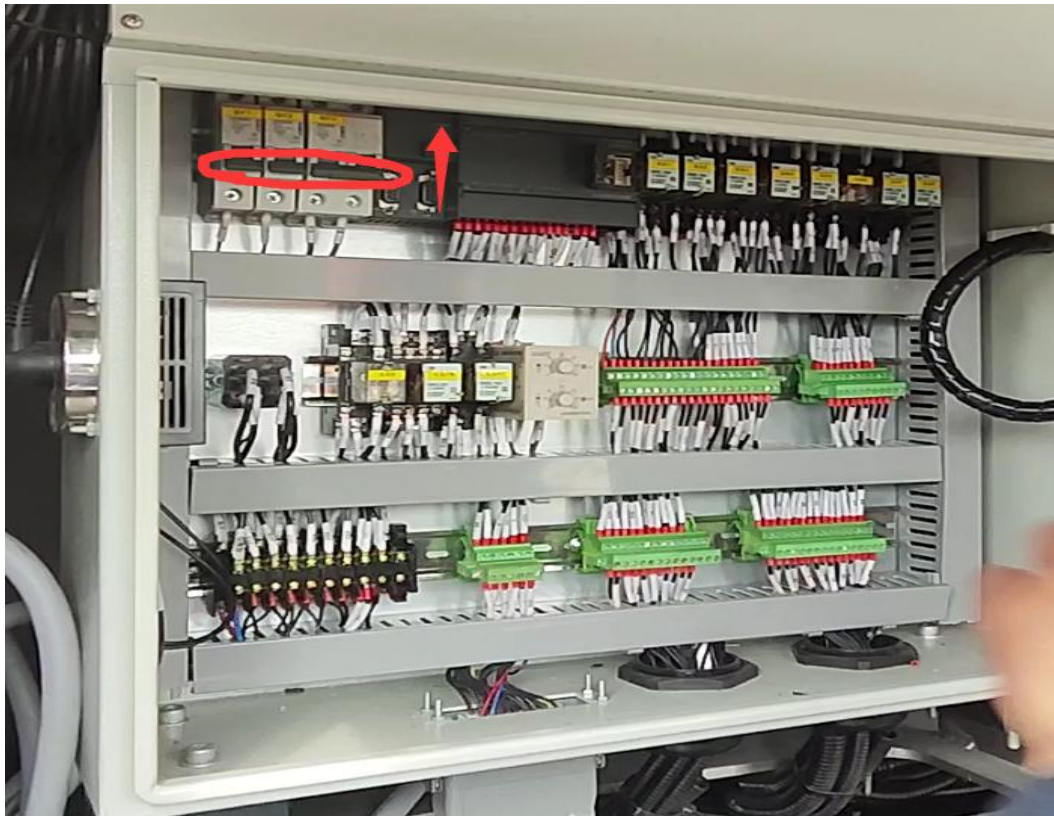



(Above photo shown Control panel On status, the four black switches in above position.)





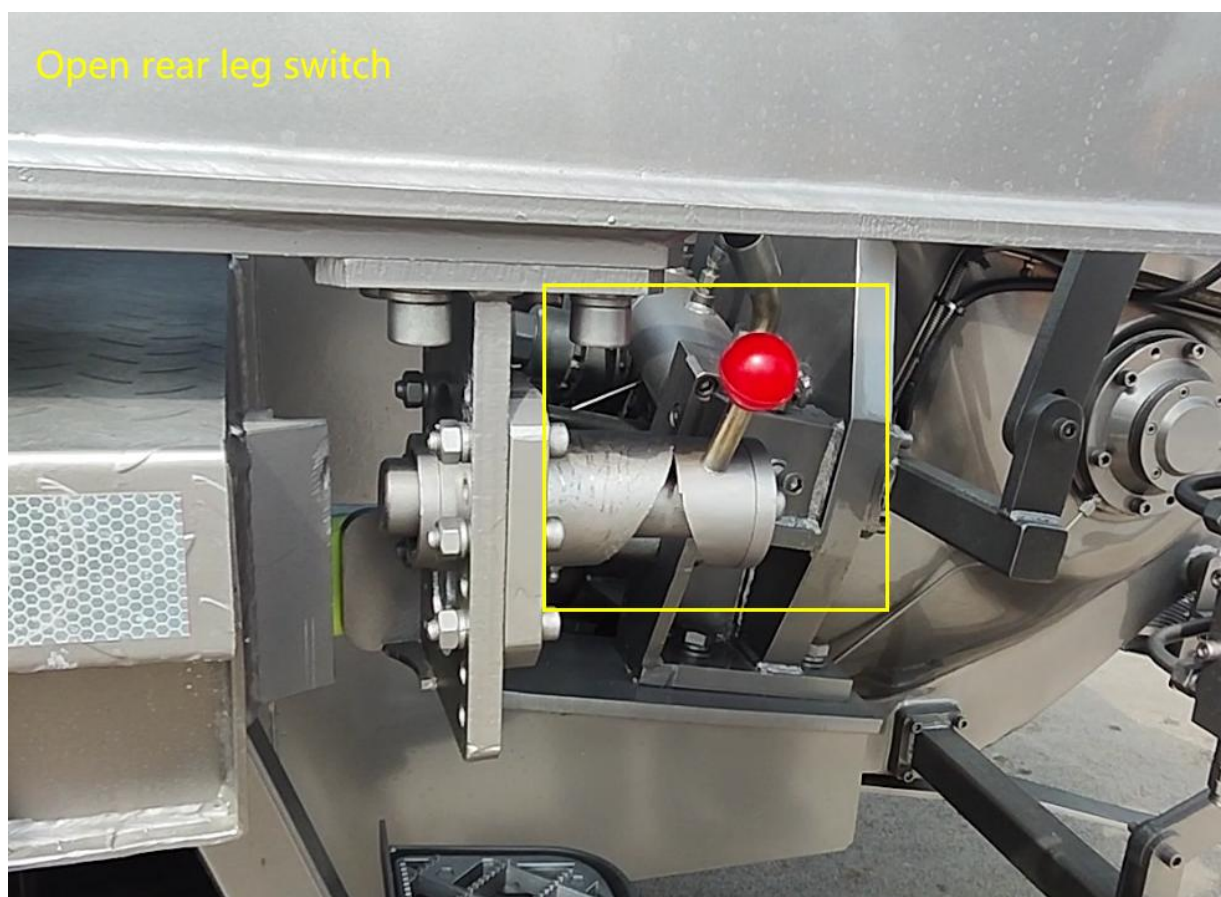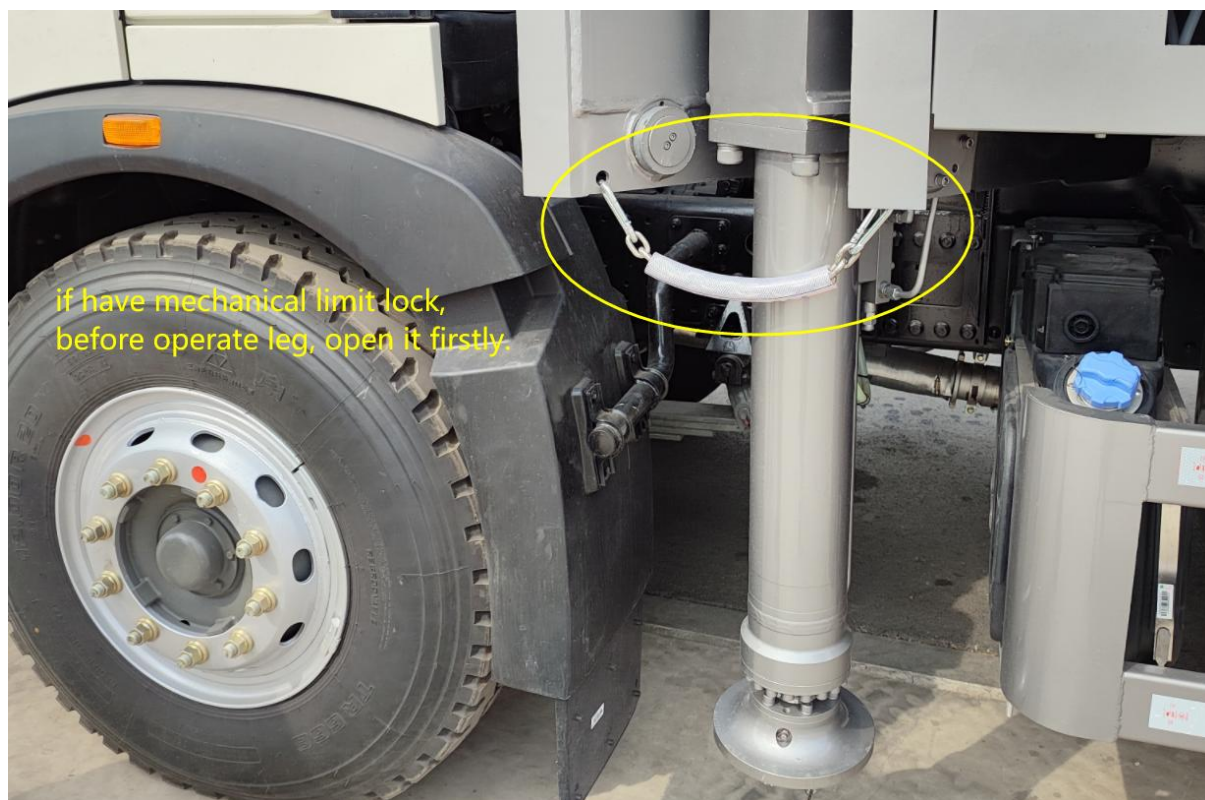




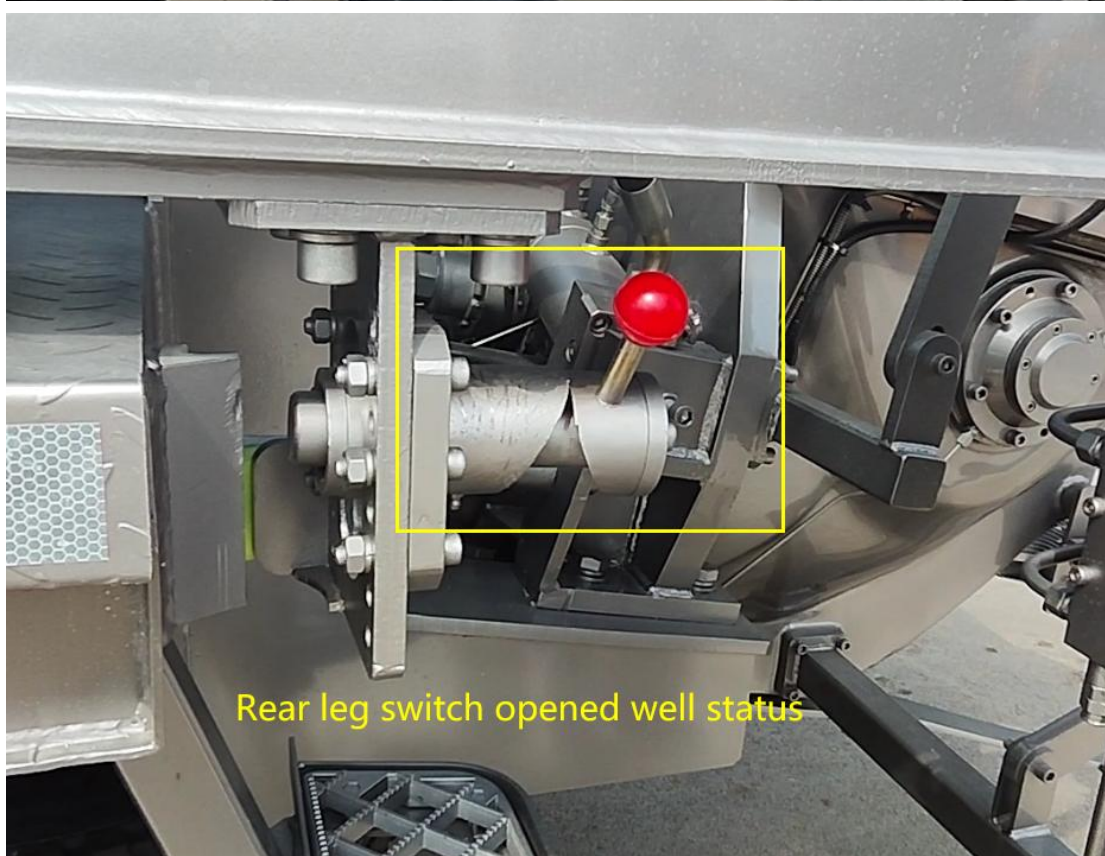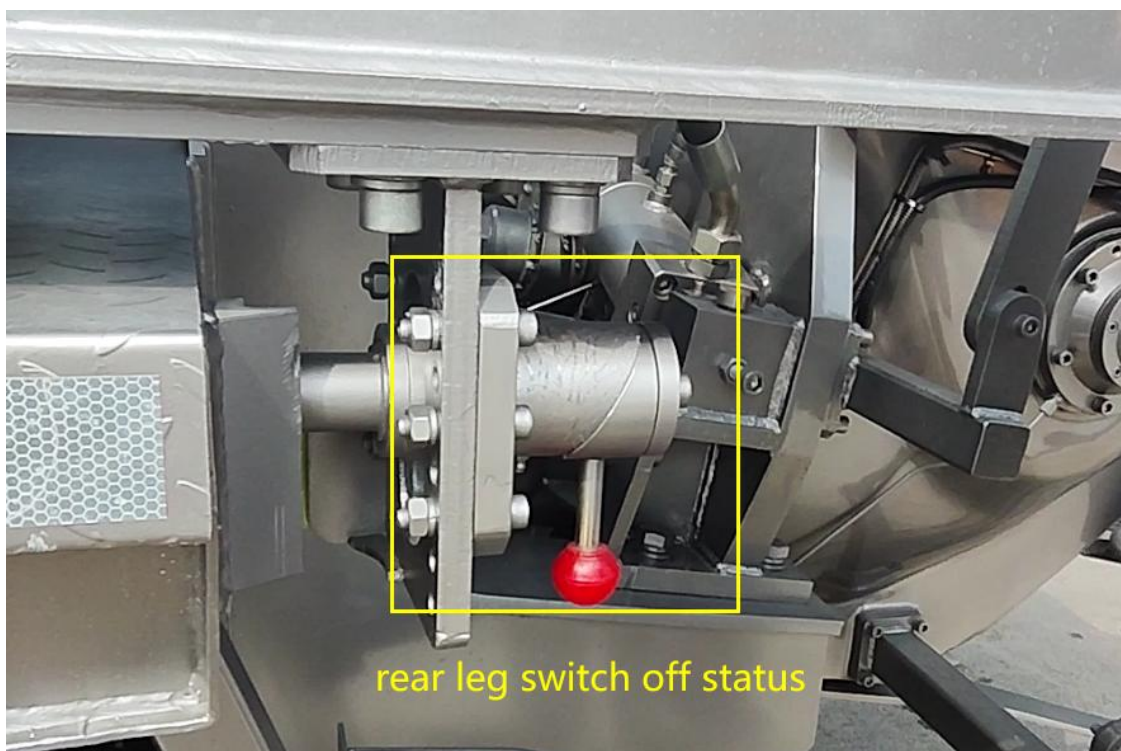







2.2 mixing blade control handle, high for mixing blade reverse rolling, low for mixing blade forward rolling.

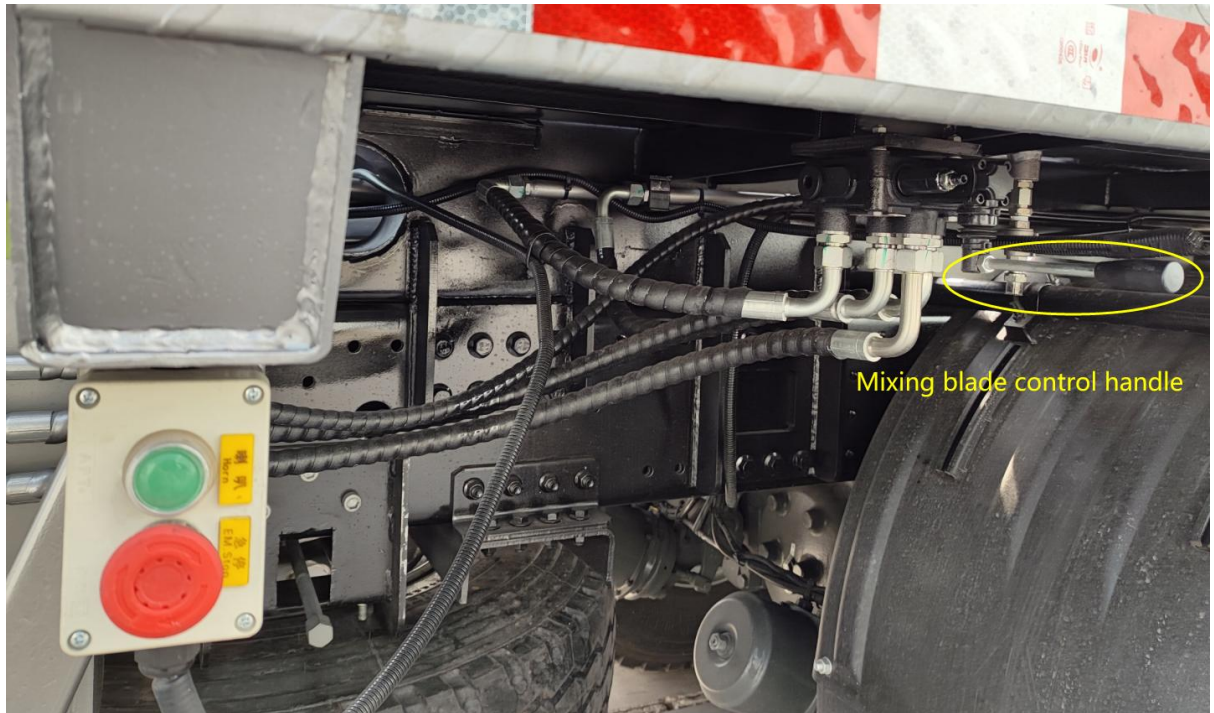

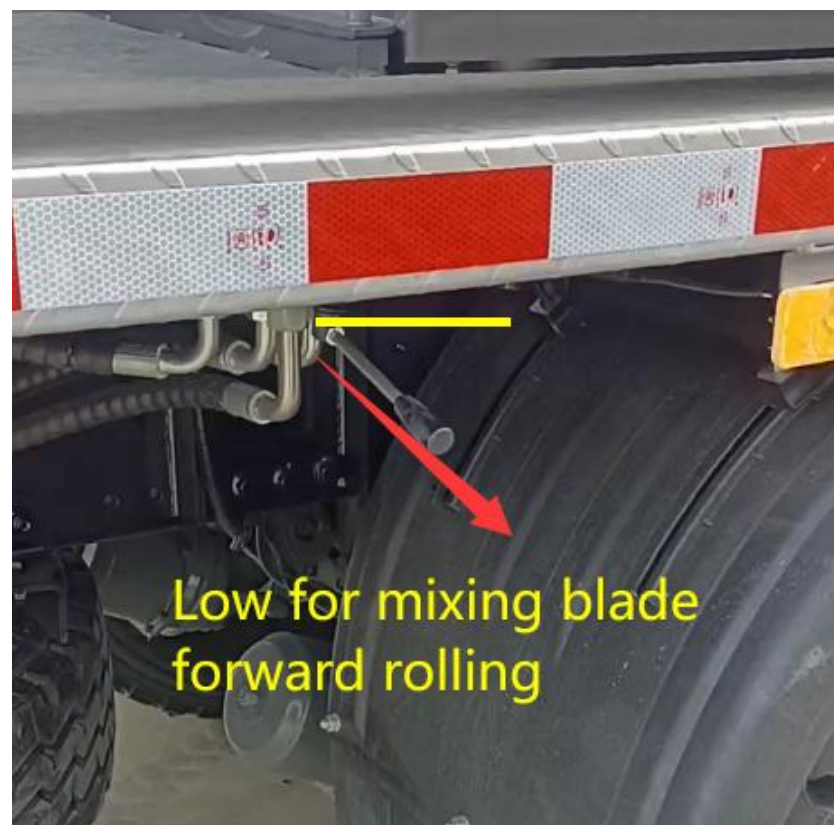



2.3 Put the handle outer to control Radiator, Put the handle inner to control water pump.

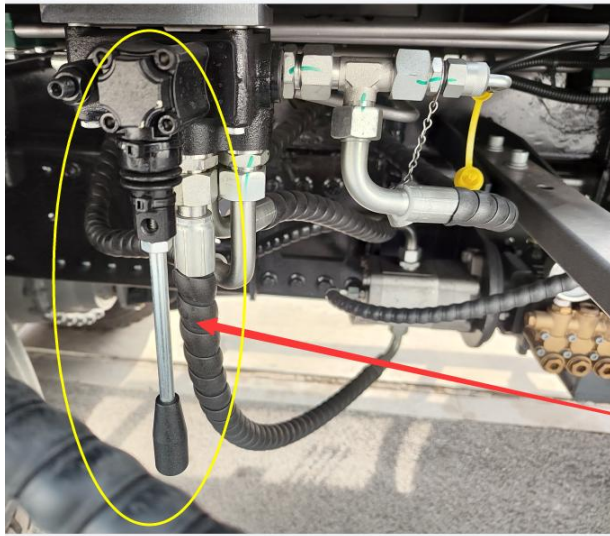






**Third step:** starts remote control: switch control panel to Far; put on the battery; rotate scram one circle; press first black button for 3 seconds; green light flashing, means the remote control started well.



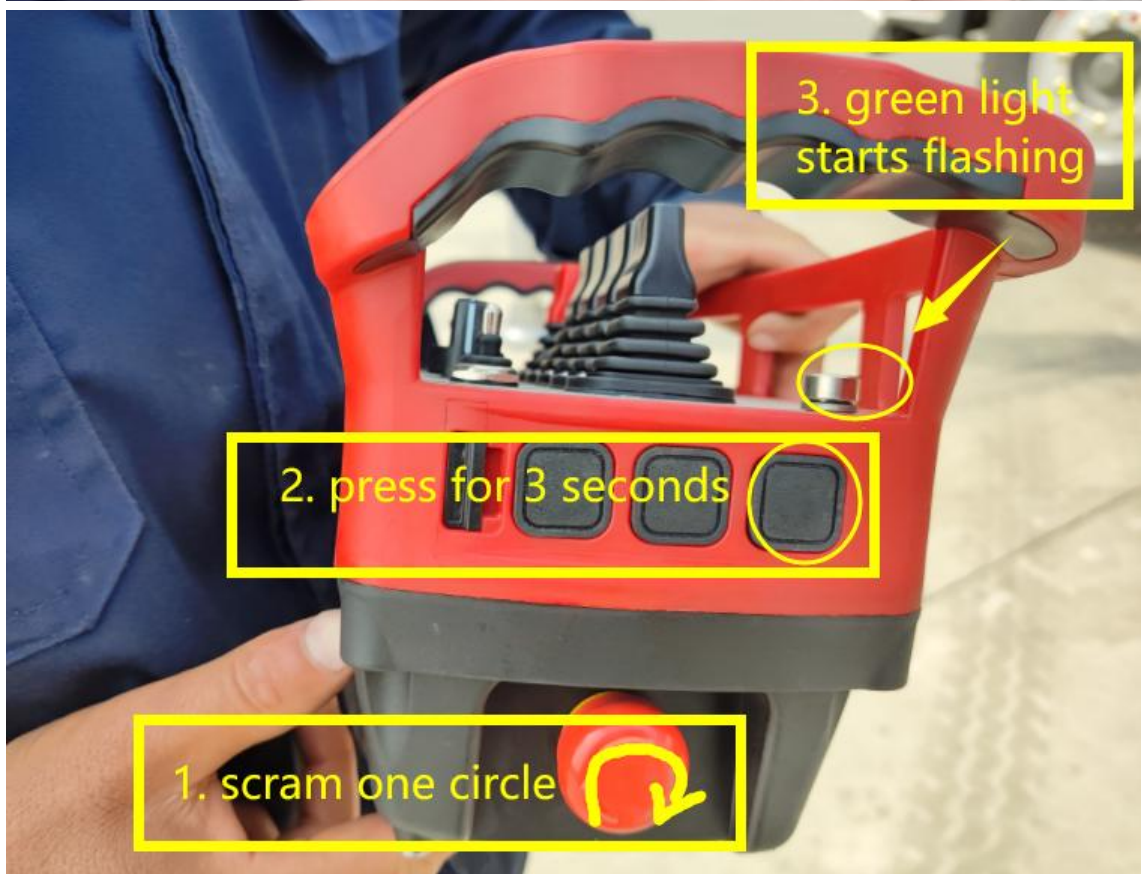





**Fourth Steps:** remote control  
operation starts engine



turn off the engine.





## Remote control Button functions:



RPM+ Engine acceleration

RPM- Engine deceleration




concrete pumping displacement adjustment.



Rabbit means boom fast speed, snail means boom slow speed




Upper means pumping, blow keep pressing is reverse pumping

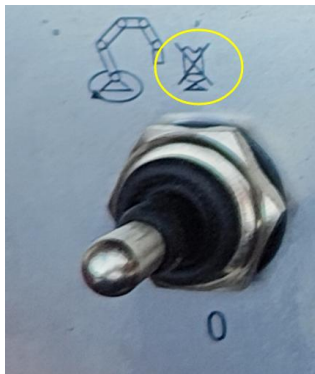

yellow marked place means pump stop.


Boom operation buttons refer to marked label

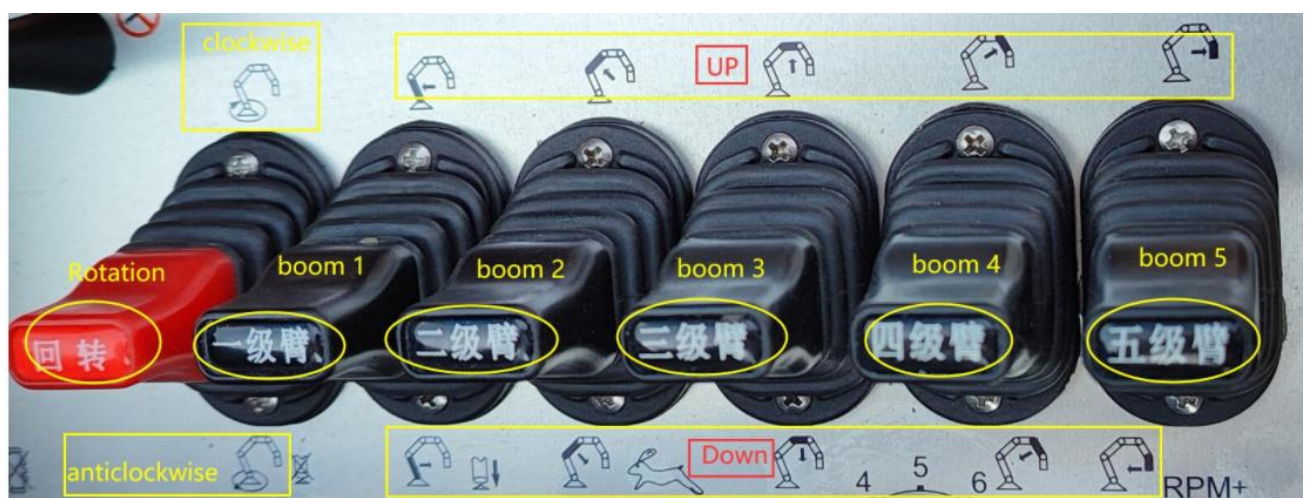



### **Fifth step:** Boom operation steps


1. lift the boom 1 to the degree more than 80 (refer to diagram 1)

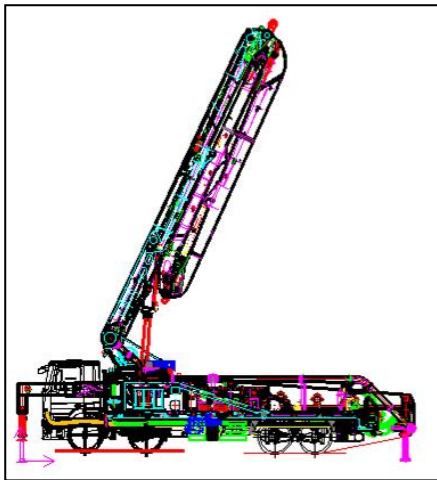

( diagram 1)


2.

boom 2 open status (refer to drawing 2)

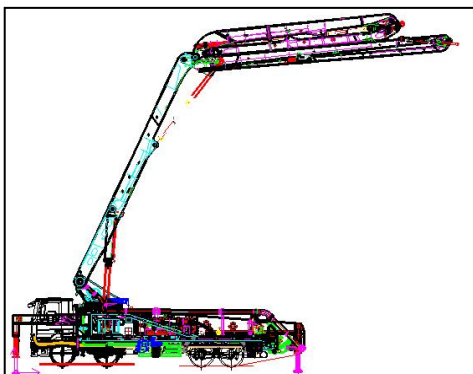


( diagram 2)

3. Rotate the boom to front of pump truck (refer to diagram 3 )

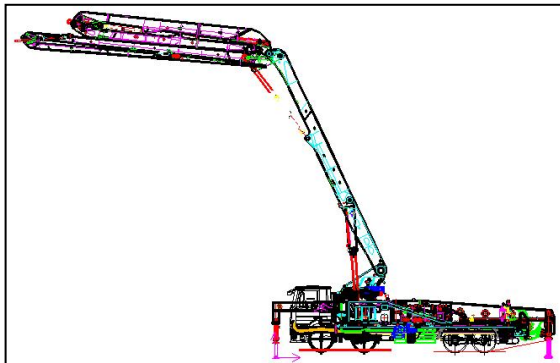

(diagram 3)


4. Open the boom 3, make boom 3 4 5 to keep vertical with ground (refer to diagram 4)

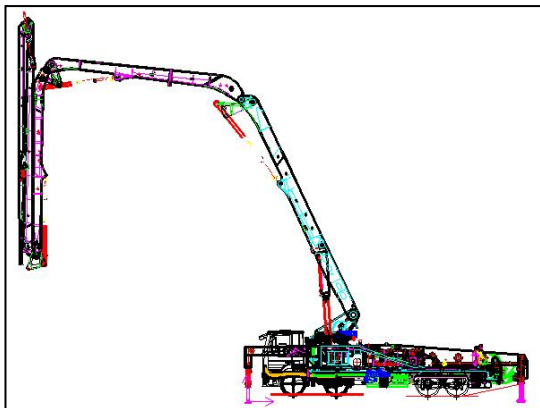

(diagram 4)




Firstly open the boom 5 to certain degree, suggest open 20 degree (refer to diagram 5). if open boom 4 without opening boom 5, may cause the collision between boom 4 connecting rod and boom 5, and structure parts will be damaged.

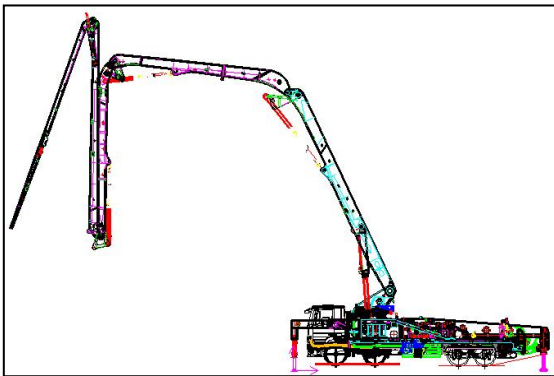

**(5 diagram 5)**

6. open the boom 3 4 5 as “Z” shape , lastly open boom 5 to the position that need pumping.

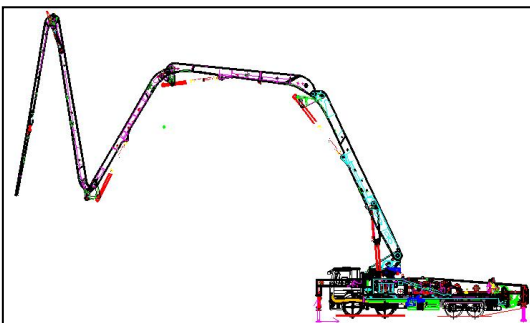

**(6 diagram 6)**



7. Boom retracting operation: follow the steps that opposite to opening, when retract the boom, be careful not touch the cab of truck.

**Sixth step:** finishing work after pumping

.

8. After working, stop pump, retract boom, after close the boom well, switch the control panel to Near status, retract leg (opposite operation steps with opening).

After retract boom and legs, go back to cab of truck. Turn gear 8 to neutral position, press Drive, turn off Power. Then can normally drive the truck away.